


GIRARDIN S - HOOKS

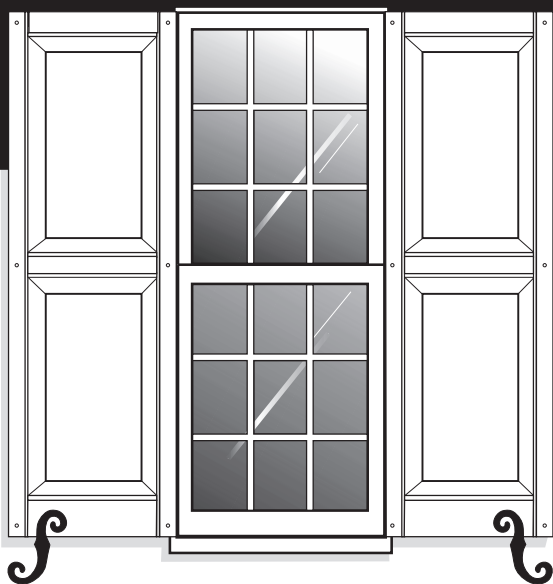

Decorative (non functional)

S-Hooks are stamped
L (left) & R (right)
on the back of each hook.

Drill 1/8" hole in shutter -
3" in from outside edge and 3/8" up
from bottom edge of shutter

Install S-Hook
(CAUTION - do not over tighten screw)



567 Halfway House Road, Windsor Locks, CT 06096
www.girardinmoulding.com