

Custom Colonial Shutter Installation Instructions For All Shutter Styles

Install shutters. (Figure 1)


Attach shutters to the wall using the six color coordinated aluminum screws provided with each pair of shutters.

The pre-painted aluminum screws are equipped with a self-drilling tip and a square socket head (Figure 2).

Requires of a #2 square drive bit.

Note: Correct installation requires the use of all six (6) screws.

Caution: Do not over tighten the screws.

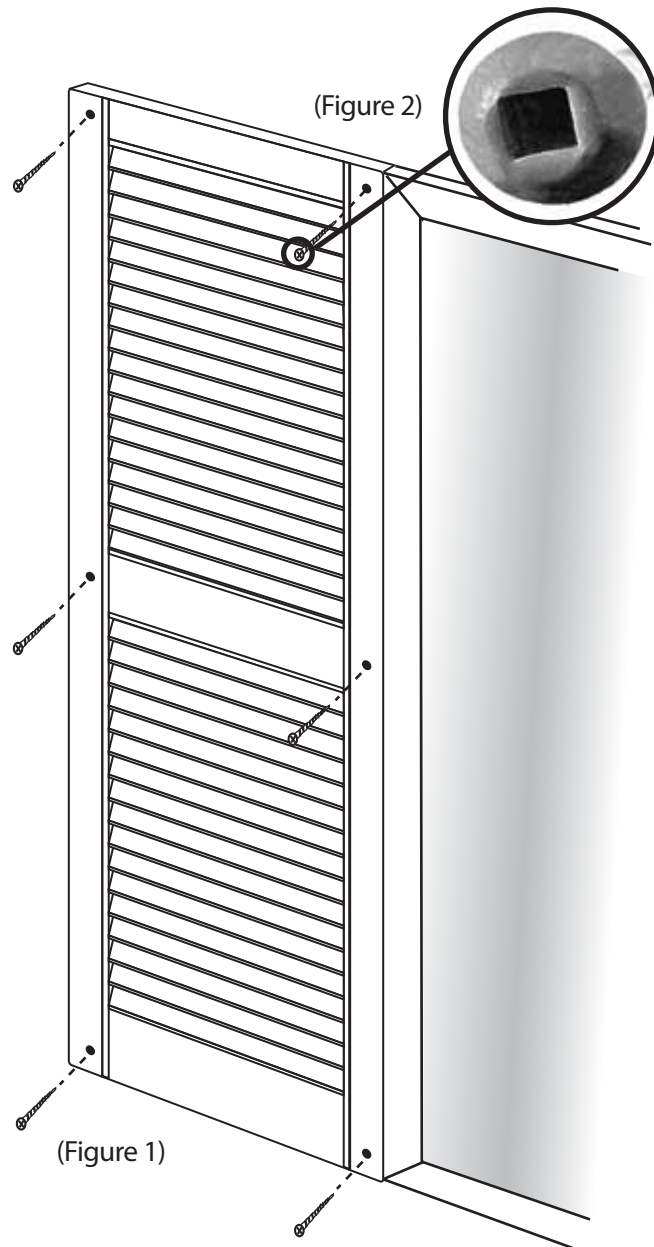

GIRARDIN MOULDING, INC.

567 Halfway House Road, Windsor Locks, CT 06096